052如何调整 OPC UA Server 访问权限

- <u>1 测试信息</u>
- <u>2 说明</u>
- 3 新建 OPC UA 项目, 默认配置下可通过匿名方式访问
- 4 通过用户名与密码访问指定的变量
  - 4.1 若希望不同变量被不同用户访问

# 1 测试信息

- Automation Studio 4.7.7
- Automation Runtime: I4.73

# 2 说明

• 至 AR G4.93, OPC UA Server 支持**匿名访问**与用户名密码访问。

# 3 新建 OPC UA 项目,默认配置下可通过匿名 方式访问

• 默认的用户角色系统 UserRoleSystem 配置,已默认添加 Anonymous 用户



• OPC UA 变量表中默认没有 Add Role

0	X20CP3687X [Software] 🔀 OpcUaMap.uad [OPC UA De	Properties - Default View 🔻 🕈 🗙		
			Name	Value
		-	📕 🗕 🚼 Default View	
	Name	Datatype	🕷 Audit Events 🛛 🖉	Dff
	😑 🇞 Default View		🖃 🗠 🚰 Authorization	
	i⊒… 🚔 <default></default>		i 🐨 Rights / Roles	Add Role
	🚞 Global Variables		····· 🖇 Visible	
	🚊 🗾 Program		🕯 Browse	
	🛓 🧼 FRM_writeAcknowledged_0	FRM_writeAcknowledged	Subscribe	
	🥏 iData	DINT	Bead	
	🧼 t	BOOL	Write	
	🧼 uVar	UDINT	History Read	
	🧼 uVar4UserA	UDINT	History Write	
	🤣 uVar4UserALL	UDINT	Execute	
	🧼 uVar4UserB	UDINT	Attribute Write	

- 注意:
  - 💥 若 Add Role 只添加 Administer,则通过默认 Anonymous 权限的无法访问
  - ✔若 Add Role 添加了 Everyone,则通过默认 Anonymous 权限的可以访问
- CPU 系统配置中默认

•🚰 OPC-UA System	
🛓 🚽 🚰 Activate OPC-UA System	on
🛓 🔤 Network Settings	
🛓 🚰 Facets	
🚊 🚰 Security	
🛓 🖙 🊰 Conversation	
🚊 🚥 🚰 Authentication	
主 🗠 🚰 Security Policies	
🖆 🖙 Authentication Methods	
🍀 Anonymous	allow
🔰 🦾 👘 Usemame	allow

• 使用 UaExpert 1.6.3 版本,使用 Anonymous 授权,即可访问

B&R Embedded OPC-UA Server and Client				
Authentication	n Settings			
Anonymous				
Username	Store			
Password				

# 4 通过用户名与密码访问指定的变量

Configuration View		🖢 Role.role [Role Configu	ıration] ×		
🦑 🧾 📰 📰		🥹 🤍 🔶 🍻 👫 🚼	00		
Configuration	Batch ^	Current 'role' element: Nr	o element selected.		
TextSystem			14.1		
	ity	Name	Value	- 1 <b>2000 1 10</b> 2	
🚊 🧶 UserRole Sy	stem		1		
😐 🦏 Role.ro	le	Description	Role for		S ETK
🗄 🖷 🐣 User.u:	ser	Everyone			
	ertificates	🔤 🕴 Role ID	2		
	>	🍿 Description	Role for		
Logical View 💏 Configuratio	on View Physical View				
onfiguration View	<b>→</b> ‡ ×	🚨 User,user (User Config	uration1* × 🐨 Role	e.role (Ro	
🤌 📑 📰		🏖 🍬 🔶 🖗 ↓2 👔	00	2 23 20 2	♥ =
onfiguration	Batch ^	Current ser' element			
🔁 TextSystem			建田白		
😐 🖓 UnitSystem		Name The UN	Value		
i- 🕺 UserRoleSv	nty /stem	🛨 🛃 💩 Anonymous	<b>B 白 ⁄ 為 小</b>		
👖 🥡 Role.rd	ble			<u> </u>	
🛨 🛶 👗 User.u	ser	Bassword		——————————————————————————————————————	置
🖻 🔤 🧑 Certificate S	tore	Roles			_
🕂 👷 Uwnu	ennicates artyCertifica	Assigne	ed Role [1] Administrat	ors	
Certific	ateRevoca	Assign	ed Role [2]	选择对	कि है
۲ 	>		Administra	ators	1415
🚮 Logical View 🛛 💐 Configuratio	on View 🇬 Physical View		Everyone	Role F	a B
ອ ໑໑໑ ແຆສີສ					
S.OPC UAS			ew] × 🗧 Prop	erties - Default View 🛛 🙀	#1Zat m
🤌 🧾 📰 📰	😼 🕼 🔷 🗞	/ 🔶 47	Name	e 🦊	
onfiguration	^ Name		Datatype	Default View	
🛯 🏘 Config1 [Active]	🖃 🛛 🐌 Defa	ult View		Audit Events	
😐 🐨 🚮 Hardware.hw		<default></default>		Authonzation	Administratem
Hardware.hwl		📺 Global Variables		🚊 🖬 Nights / Noles	
	<b></b>	💓 Program		Rrowse	
🛓 📲 Cpu.per		🕂 🧼 FRM_writeAckno	FRM_writeAck	Subscribe	<b>v</b>
🧕 loMap.iom		🧼 iData	DINT	····· 🕴 Read	
🕂 🧭 PvMap.vvm		🧼 t	BOOL	🦳 🕴 Write	
E Connectivity		🧼 uVar	UDINT	····· 🌒 History Rea	d 🔽
	Mapuad	www.www.uVar4UserA	UDINT	····· 🌒 History Writ	e
🔤 🛱 TextSystem		wVar4UserALL		····· 🌒 Execute	



### 4.1 若希望不同变量被不同用户访问

🔀 OpcUaMap.uad [OPC UA Default View]* 🗙 🔍 🔻		Properties - uVar4UserA			
		Name	Value Value		
		🗖 🚼 uVar4UserA 💦 👝 💻			
Name	Datatype	🕴 Audit Ev 🔊 👬			
🖃 👔 🏓 Default View		····· 🕴 Minimum Sampling Interval (			
🖃 🚔 <default></default>		Authorization	<u> </u>		
🚊 Global Variables		Inherit From Parent	Inherit None		
🚊 🗾 Program		🖃 🖷 🚰 Rights / Roles	Administrators		
🕂 🧼 FRM_writeAckn	FRM_writeAcknowled	····· 🕴 Visible	✓		
👘 🧼 iData	DINT	🕴 Browse 🥱	Y ✓		
1.预料答视	<u>%</u>	🕴 Subscribe 🌏			
	דאוסט	🕴 Read 🚈	₩ 🗸		
uVar4UserA 🖉 🖉	UDINT	····· 💲 Write 😽			
🧼 uVar4UserALL	UDINT	🕴 History Read 🔢			
i 🧼 uVar4UserB	UDINT	🕴 History Write 🕂 🗖			
		🕴 Execute 📈			
		Attribute Write			